



OWNER'S MANUAL

2.4GHz Multi-Handset Cordless Phone System



Se Incluyen Instrucciones en Español

2.4GHz Multi-Handset Cordless Phone System

Congratulations!

You have just purchased a 2.4GHz multi-handset cordless telephone system from Qwest that has been designed and manufactured to the highest standards of Qwest.

Expand the multi-handset cordless phone into a one-line home or business system by adding up to three additional cordless handsets. All handsets work together and just one jack is required for the entire system.

TO RECEIVE THE FULL BENEFITS OF THIS TELEPHONE SYSTEM, IT IS IMPORTANT THAT YOU READ THIS OWNER'S MANUAL.

2.4GHz Multi-Handset Cordless Phone System

Important Safety Instructions and Battery Safety

CAUTION

To reduce the risk of fire, electric shock, and/or injury, always follow these basic safety precautions when using your telephone equipment.

1. Read and understand all instructions.
2. Follow all warnings and instructions including those marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use the base station near water. For example, the station should not be in use near a bathtub, wash bowl, kitchen sink, laundry tub, wet basement, or swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be used with a 110 volt AC outlet. If you are not sure of the type of power supply in your home, contact Qwest or your local power company.
8. Do not overload wall outlets and extension cords as this can lead to fire or electric shock.
9. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could lead to fire, electric shock, or injury. Never spill liquid of any kind on this product.
10. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages, electrical current, or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
11. Unplug the base station from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. If a liquid has been spilled onto the product.
 - b. If the product has been exposed to rain or water.
 - c. If the product does not operate normally when following the operating instructions.
 - d. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by qualified service personnel to restore the product to normal operation.
 - e. If the product has been dropped or cabinet has been damaged.
 - f. If the product exhibits a distinct change in performance.
12. Avoid using the telephone during an electrical storm. There may be a risk of electrical shock from lightning.
13. Do not use the telephone to report a gas leak in the vicinity of the leak.
14. The antenna on the base station does not retract. To prevent injury, do not place the telephone where persons can step, trip, or fall on the telephone.
15. Do not place metal objects on the antenna.
16. Do not stick foreign objects into any of the holes on the base station or cordless handset. You could harm the speakers, ear pieces, microphones, or yourself.

2.4GHz Multi-Handset Cordless Phone System

17. Never install jacks in a wet location unless the jack is specifically designed for wet locations.
18. Never touch non-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
19. Use caution when installing or modifying telephone lines.

Battery Safety

To reduce the risk of fire, injury, electric shock, or property damage, and to properly dispose of batteries, please read and understand the following instructions.


1. Use ONLY type AA Nickel-Metal Hydride (NiMH) rechargeable batteries in the cordless handset and reserve battery compartment.
2. DO NOT use other rechargeable batteries or non-rechargeable batteries. The batteries could short-circuit, and the battery shell may be damaged causing a hazardous condition. Instruction labels are located in the handset and charging unit battery compartment.
3. Do not place the batteries in contact with water or fire.
4. Always follow basic safety precautions when using and disposing of batteries. Do not dispose of the batteries in a fire; the cells may explode. Check with local codes for special disposal instructions.
5. DO NOT USE ALKALINE, NICKEL CADMIUM, OR LITHIUM BATTERIES IN THE CORDLESS HANDSET BATTERY CHARGER OR RESERVE BATTERY COMPARTMENT.
6. Periodically clean the charge contacts on both the charger and handset with a soft cloth slightly dampened with water or mild hand soap.
7. DO NOT mix old and new batteries in this product.
8. Position positive (+) battery contact to match the instruction labels in the cordless handset and spare battery compartment.
9. Use caution when handling batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or a fire.
10. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
11. THE BATTERIES HEAT UP WHILE CHARGING. THIS IS NORMAL AND IS NOT DANGEROUS.

NOTE: SAVE THESE INSTRUCTIONS!

Table of Contents


Congratulations!	2
Important Safety Instructions and Battery Safety.....	3
Diagram of Handset.....	6
Diagram of Base	7
Chapter 1 - Installation	8
Chapter 2 - Getting Started	11
Chapter 3 - Features	15
Chapter 4 - Caller ID/Call Log.....	20
Chapter 5 - Directory	24
Chapter 6 - Personalizing Your System	27
Chapter 7 - Additional Handsets and Chargers.....	31
Chapter 8 - Troubleshooting.....	33
FCC Wants You to Know	36
Care and Maintenance	37
Limited Warranty	37
English Index.....	38
Spanish Instructions.....	39

Diagram of Handset

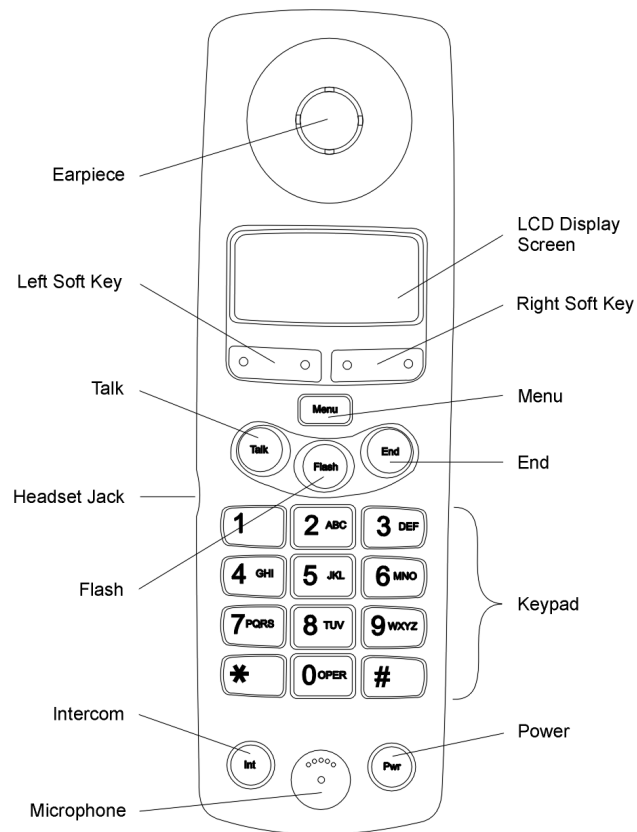

2.4GHz Multi-Handset Cordless Phone System

Diagram of Base

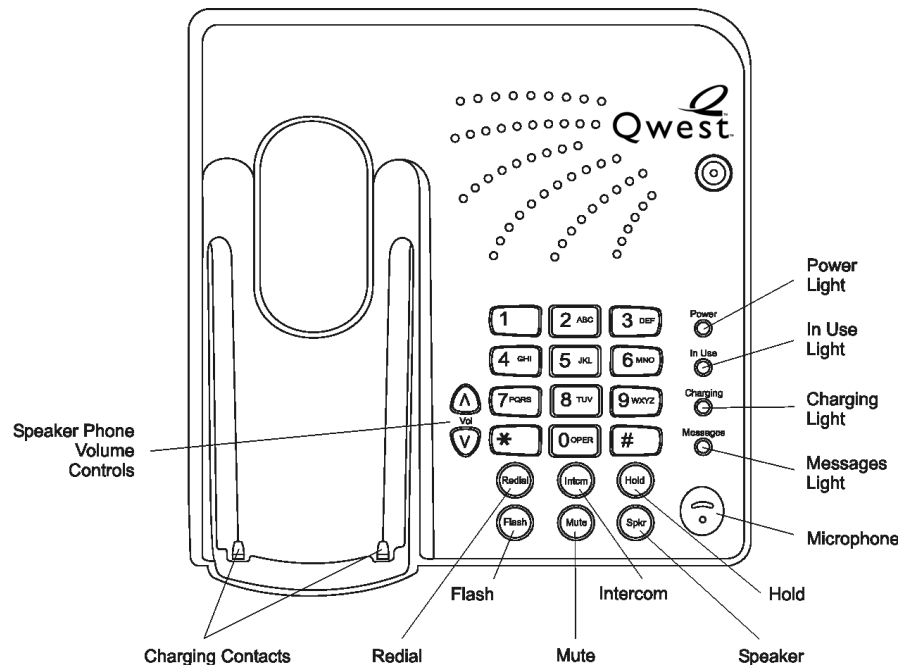

Chapter 1



Installation

Contents of System Box

Before installing your multi-handset cordless phone system, check the shipping carton to be sure you have the following:

- Base (page 7)
- Cordless Handset (page 6)
- Power Supply (page 9)
- Quick Start Guide
- Owner's Manual
- Handset Accessory Kit
 - Belt Clip (page 10)
 - 2 AA Ni-MH Batteries
 - Battery Door Cover

Notes:

Keep the shipping carton and packaging in case you need to transport your phone.

If the equipment is damaged, do not use it.

Contact your Qwest representative at 1-800-770-2513 for return authorization.


Installing the Handset

Handsets are powered by 2 AA-sized rechargeable Nickel Metal Hydride (Ni-MH) batteries. Batteries charge automatically when the handset is placed in the base cradle or cradle of the optionally purchased desktop charger (See Chapter 7).


2.4GHz Multi-Handset Cordless Phone System

Warning! Use only Ni-MH batteries. Do not use Alkaline, Ni-Cad, or Lithium batteries.

1. Place 2 AA rechargeable Ni-MH batteries into the handset battery compartment. Slide the battery cover firmly into the grooves until it latches. See the illustration.

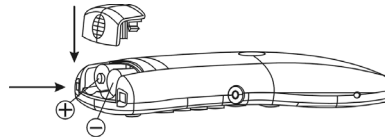

2. Place the cordless handset into the base cradle or optional charger. The base light or charger light will illuminate.
3. The batteries should fully charge for 12 to 14 hours before you use the phone.

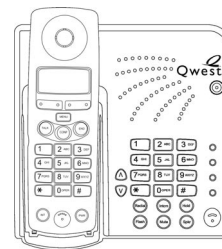


Installing the Base

For optimal performance,

- Install the base AWAY from electrical appliances such as televisions, personal computers, microwave ovens, or other cordless phones.
- Use the handset AWAY from microwave ovens or other cordless phone base units.

Warning! Use only the AC power supply provided with this phone. DO NOT use an outlet controlled by a wall switch.

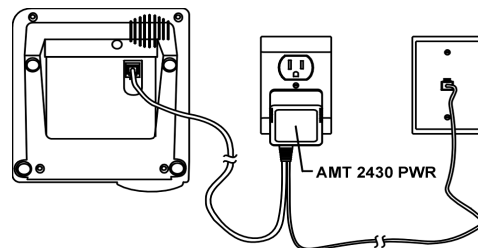

Proper Base Installation

Note: Place the base on a hard, flat surface. It cannot be wall mounted. Connection to both a phone wall jack and a standard 110/120 volt outlet is required.


2.4GHz Multi-Handset Cordless Phone System

1. Plug the AC power supply into a standard 120 VAC wall outlet.
2. Locate the larger of the two connectors (RJ 45) and plug it into the back of the base.
3. The **Power** light on the base will illuminate.
4. Plug the smaller of the two connectors (RJ 11) into your telephone jack in the wall.

Installing the Belt Clip

Installing the belt clip enables you to transport the handset on your belt.

1. Remove the belt clip from the handset accessory kit. Place the belt clip at the top of the back of the handset.
2. Slide the belt clip into place as illustrated.
3. Snap the pins on the inside of the belt clip's arms into the pin holes near the handset's ear piece.

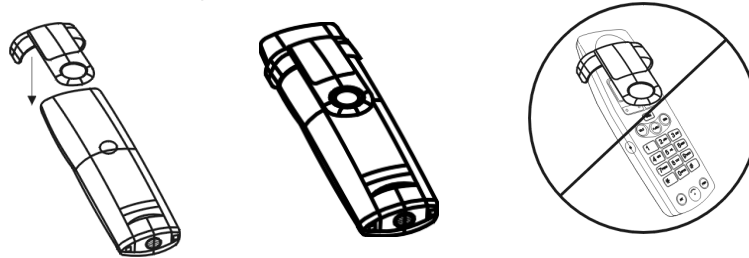

Chapter 2

Getting Started

Up to four cordless handsets may be used with your base station. The four handsets include the one handset that comes with the base and up to three additional handsets. The handset that comes with the base is pre-registered to work with the base. You must register additional handsets so that they will also work with your base. For instructions on registering additional handsets, see Chapter 7 on Page 31 of this Owner's Manual.

Any combination of two handsets (or handset and base speakerphone) may be engaged in calls at the same time. For example, Handset 2 and the base speakerphone can talk to an outside caller while Handset 1 and Handset 4 talk on an intercom call.

To access features on the handset, use the dedicated hard keys (**Talk**, **Flash**, **End**, **Menu**, and **Int**) or the soft keys located directly under the display. The function of a soft key is defined by the text or icon that appears in the display directly above the soft key. For example, first press the hard key labeled **Menu**. The display will look like the example shown here. Pressing the soft key below ▲ or ▼ will scroll through the menu options. The dashed line in the list of options indicates the end of a menu list. Pressing the soft key below **OK** will select the highlighted option. Pressing the soft key below ↶ will return the menu to the previous level. Pressing the hard key labeled **End** will exit all the way out of the menus.



To access features of the base speakerphone, use the dedicated hard keys on the base: **Redial**, **Intcm** (Intercom), **Hold**, **Flash**, **Mute**, **Spkr** (Speakerphone), and **Vol** (Speakerphone Volume).

Answering Calls

There are two ways to answer an incoming call.

Handset

Press the **Talk** key.

Speakerphone

Press the **Spkr** key.

2.4GHz Multi-Handset Cordless Phone System

Ending Calls

Handset

Press the **End** key.

Speakerphone

Press the **Spkr** key.

Making External Calls

Handset

1. Lift the handset.
2. Enter the number (up to 32 digits).
To delete the character to the left of the cursor, press .
To insert a character, use  or  to position the cursor.
To enter a pause, press **Flash**.
3. Press **Talk** button to connect to the phone line and dial the number.

Speakerphone

1. Press the **Spkr** key to obtain dial tone.
2. Dial the number using the keypad on the base.

Adjusting Volume

Handset

When on a call, press the softkeys labeled:  **Vol** .

Speakerphone

When on a speakerphone call, press the up or down arrow labeled **Vol** on the base.

2.4GHz Multi-Handset Cordless Phone System

Internal Calls (Intercom Calls)

You may talk with another person using the handset or base without engaging the external phone line.

Handset

1. Press **Int** on the handset.
2. When you hear the internal dial tone (a pattern of three short beeps followed by a pause), dial the number of the handset you want to call (a number from 1-4), or dial 0 to call the base.
3. Press the * key or the **ALL INT** soft key to page all handsets. All phones will ring, but only one can take the call.
4. The party being called presses either **Talk** on the handset or **"Intcm"** on the base to answer.
5. When finished, press **End** once or return handset to base (or charger) to disconnect the call.

Speakerphone


1. Press **Intcm** on the base.
2. When you hear the internal dial tone (a pattern of three short beeps followed by a pause), dial the number of the handset you want to call (a number from 1-4), or press * to ring all handsets (although only one can answer.)
3. The party being called presses either **Talk** on the handset or **Intcm** on the base to answer.
4. When finished, press **Intcm** on base or **End** on handset.

Redial

You may redial any of the last five external numbers dialed from a handset or the last number dialed from the speakerphone.

Handset

1. Press the **REDIAL** soft key.
2. Use the  and  keys to view the redialable numbers and the **Talk** key to dial the displayed number.

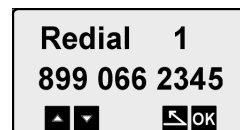

Note: Redialable numbers are unique to each handset.

2.4GHz Multi-Handset Cordless Phone System

Speakerphone

On the base, press **Redial**. A call will be placed to the last number dialed from the base.

Hold

External calls may be placed on hold, while internal (intercom) calls cannot be held. Any system handset, the base speakerphone, or a parallel (non-system) phone in your home can pick up a held call.

Handset

1. Press the **HLD** soft key on the handset.
2. The  icon in the upper left of the handset display will flash. To resume the call, press **Talk**.

Speakerphone

1. Press **Hold**. It will begin to flash.
2. To resume call, press **Hold** or **Spkr**.

*Note: If two internal parties are talking to the external line, pressing the **Hold** key on one of the two internal handsets is equivalent to dropping out of the call. The other internal party will still be connected to the external party.*

Chapter 3

Features

Auto Back light

The handset display illuminates when keys are pressed and stays lit for several seconds afterward.

Out of Range

If you try to place a call or turn your handset on when you are too far away from the base, you will hear an out of range warning (four very fast beeps). The handset display will show "Searching," and the **I>>>>** symbol flashes. Move in closer to the base and try again.

Low Battery Indication

When the battery begins to run low, a  symbol in the upper right hand corner of the handset's display will appear. A clear battery icon and a long beep every 30 seconds signal low battery power. Return the cordless handset to either the base unit or the *optional* charger cradle.

Call Timer

A call timer, located in the upper right corner of the handset display records the duration of a call. It begins timing the call from the moment you get a dial tone. It ends when the line disconnects.

Message Waiting Indicator

If you subscribe to voice messaging service from Qwest, both the handset and the base station will indicate that you have a message waiting. On the handset, an envelope  will appear in the middle of the first line of the handset screen. On the base station, the "**Messages**" light turns on. It turns off once you retrieve messages.

Note: If light does not go out, select "Reset Msg Waiting" under "System Settings" Menu.

2.4GHz Multi-Handset Cordless Phone System

Transfer

Transferring a call involves moving an external call from one handset to another. Internal (intercom) calls may not be transferred. There are two types of transfer: announced and unannounced.

Announced Transfer

1. Place an outside call on hold.
2. Place an intercom call to another handset (a number from 1-4), or dial 0 to call the base.
3. Announce the call to the person who answers.
4. Hang up.
5. The person who receives the call presses **Talk** or **Spkr** to accept the call.

Unannounced Transfer

1. During an external call, press **Int** on the handset or **Intcm** on the base.
2. Place an intercom call to another handset (a number from 1-4), or dial 0 to call the base.
3. The call will ring on the handset you dialed. Other handsets (or speakerphone) will show a solid line to indicate the phone is in use.
4. If the transferred call is not picked up after 30 seconds, the call returns to the original recipient.

*Note: You may also initiate unannounced transfer by pressing **Int*** and any ringing handset or the base speakerphone may pickup.*

Call Waiting (Flash)

The **Flash** key is used with the Call Waiting feature. Press **Flash** to switch between calls when the Call Waiting signal is heard.

Note: The Call Waiting signal requires subscription to the Call Waiting feature from Qwest or your local telephone company.

Mute

Mute allows you to temporarily disconnect the base speakerphone so you may hear the caller, but the caller is prevented from hearing you.

1. Press **Mute** on base speakerphone. The light illuminates.
2. To return to your conversation, press **Mute** again.

2.4GHz Multi-Handset Cordless Phone System

Consultation Call

You may consult with another intercom party while engaged in an external call.

1. Place the external call on hold.
2. Dial the internal (intercom) party.
3. Confer with the internal caller. Press **End** or **Intcm** to terminate the intercom call.
4. Resume the original call by pressing **Talk** or **Spkr**.

Call Pending

When engaged on an intercom call, the system alerts you that an external call is being received.

1. During an intercom call, an external call comes in (a tone will sound).
2. Non-system (parallel) phones will ring.
3. The handset display shows **ACCEPT**.
4. Press **Talk** or the **ACCEPT** soft key on the handset. On the base, press **Spkr** (it will be flashing) to accept the call.
5. Both parties of the intercom call are now connected to the outside line.

Join a Call

Picking up either a system handset or another household telephone will allow access to the external line unless more than two system handsets (or handsets and speakerphone) try to engage the line. If more than two system phones try to pickup the call or if a system handset tries to pickup a call with two system handsets already connected, an error tone will result.

Note: A parallel (non-system) household telephone can access the external line even if two system handsets are on the line.

Calling Features


Use your handset to easily access **Qwest** calling features. Qwest calling features are offered by subscription or on a pay-per-use basis. For more information about calling features offered in your area, contact your Qwest representative.

1. Press **Talk**.
2. The display screen will show **SERVICE**. You have 5 seconds to select this feature.



2.4GHz Multi-Handset Cordless Phone System

3. Scroll to the feature you want and press **OK**.
4. The system will dial the appropriate "star code" feature: (* is automatically dialed.)
 - *70 to cancel call waiting,
 - *69 for auto callback (Last Call Return),
 - *66 for repeat dialing (Continuous Redial),
 - *67 for repeat dial off (cancel Continuous Redial).
5. If "Auto Callback" or "Repeat Dialing" is selected, the display screen will show "Possible Additional Cost" for 2 seconds.
6. After canceling Call Waiting (the display shows *70), you can use the Directory to place a call. Select **OK**, **Menu**, **OK**, select directory item and press **Talk**.
7. Press **End** at any time to return the handset to the idle (unused) state.

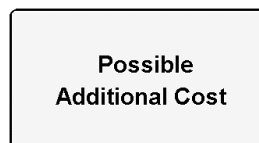

Three Way Calling (Conference)



Three way calling may be used at anytime during an external call between two parties who wish to add a third party.

1. When you wish to add the third party (a third external line), press **3WAY** in the display. "Possible Additional Cost" will appear for two seconds on the display.
2. The display will show "Please Dial" (or press **Menu** for the directory).
3. You may dial the number of the third party directly onto the key pad and press **3WAY** again to join all parties. You may also dial the third party through the directory by pressing **Menu**, selecting "Directory," pressing **OK**, and scrolling through the directory to the desired number. Press **Talk** to dial the number, and then press **3WAY** to join all parties.
4. Pressing **3WAY** again will disconnect the third party.

Room Monitor

You may use one or more cordless handset to alert you of noise within a handset's hearing range. For example, you may monitor activities in another part of your home.

1. Press **Menu**.
2. Select "Room Monitor" by using the **▲** and **▼** arrow keys to scroll down the menu, and press **OK**.

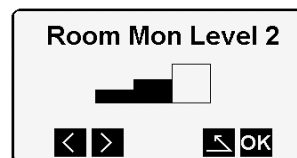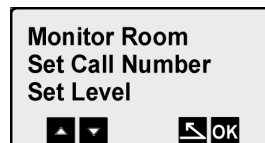

2.4GHz Multi-Handset Cordless Phone System

3. Press **OK** until a check mark appears next to "Monitor Room."
4. Select "Set Call Number" and press **OK**.
5. Enter the handset number of the handset that will be alerted by this room monitor handset. The handset number of the alerted handset must be different than this room monitor handset. Enter 0 to alert the base speakerphone. Enter * to alert all handsets and the base speakerphone.
6. Press **OK**.
7. Select "Set Level," press **OK**. There are three noise levels that will trigger a call. To set the level on the room monitor, use the **◀** and **▶** arrow keys. The Level 1 setting requires the least amount of noise to trigger a call, Level 3 requires the most amount.
8. Press **OK** then **End**.

Note: The handset remains in the Room Monitor mode until you disable it.

To disable the Room Monitor,

1. Select "Room Monitor;" press **OK**.
2. Press **OK** to remove checkmark and then **End** to return handset to idle state.

*Note: An incoming call will not ring on handsets in the Room Monitor mode. You will see the call on the handset's display, and you may pickup the call by pressing **Talk**.*

Temporary Tone

The system is set to tone dialing from the factory. If your phone line is set to pulse dialing, you can access bank facilities and telephone answering machines through the handset's temporary DTMF menu.

1. Press **Talk**.
2. Press **Menu**.
3. Scroll to the **Temp DTMF** On/Off toggle key.
4. Press **OK**.
5. Dial number. The handset will reset automatically when the call ends.

To set your phone to pulse dialing

1. Press **Menu**.
2. Select "System Settings", press **OK**.
3. Select "Tone/Pulse Dial", press **OK**.
4. Select "Pulse Dialing". A check mark appears next to Pulse Dialing.

Chapter 4



Caller ID

Caller ID and Call Waiting ID are optional subscription services provided by **Qwest**. The system generates a Caller ID record for every incoming external call and 'for each Call Waiting call' that includes Caller ID information.

Caller ID information is shown on the handset display. It shows the name and number of the caller, and time and date of the call.

Note: If you do not subscribe to Caller ID with name, the name will not appear.

The Call Log feature stores information for incoming external calls. The Call Log maintains a list of the last 50 calls received. Call Waiting calls are also included in this list if you have subscribed to Call Waiting ID. Entries are viewed one at a time and are always shown in reverse chronological order, that is the most recent call is shown first and scrolling down in the Call Log will show the next most recent call.

Items Stored in the Call Log

Caller Name

The calling party name is displayed as received from the telephone company. If more than 16 characters are received, only the first 16 are displayed.

Time and Date

The time and date are received as part of the Caller ID message and are stored in the Call Log. If the information is not received as part of the message, 00:00A and 00/00 will be stored in the call log as the time and date.

2.4GHz Multi-Handset Cordless Phone System

Incoming Calls

The Incoming Call screen shows an incoming call on the second ring and includes the calling name and number.



Call Log

The Call Log contains information about incoming external calls. You may view the entry, dial the number associated with the Call Log entry, save the entry to the local handset directory, delete the entry, or delete all entries in the Call Log.

Multiple handsets may access the Call Log simultaneously. Since any handset may delete entries, an entry may be deleted while being viewed by another handset. If this happens, the entry will continue to appear on the other handset until the handset selects another entry.

Note: When the handset is in the Call Log and receives an incoming call, it exits the Call Log and displays the received call information.

Accessing the Call Log

1. Press **Menu**.
2. Select "**Call Log**" and press **OK**.
3. Use the **▲** and **▼** keys to view the call log entries.



The Call Log Entry screen shows a sample Call Log entry. Line 1 shows the number of times the person called followed by the date and time of the most recent entry. Line 2 shows the caller ID (Name, Unknown, or Private). Line 3 shows the Caller ID number followed by the codes for calls that were Answered (A), and Called Back (C).


4. To call a number from the Call Log, press **Talk** when the name/number is in the screen.

Note: If 10-digit dialing is required in your local area code and only the 7-digit number shows, the call attempt may fail. See Setting Area Code in Chapter 6 of this Owner's Manual.

Note: If the number of times called is not greater than one, the number of times called is not shown. Repeat calls are shown to a maximum of nine. If the time and date were not received from the network before the call arrival, the time and date are not shown.

2.4GHz Multi-Handset Cordless Phone System

5. To delete a number from the Call Log, press **DEL** when the name/number is on the screen.
6. The "Call Log End" screen appears at the end of the Call Log.
7. Press **↶** or **OK** to return the phone to the idle state.
8. The "No Data" screen appears if you do not subscribe to Caller ID or data was not received before a call was answered.

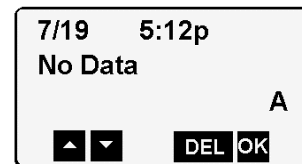

Call Log Menu

1. Press **OK** while viewing a call log entry to display the Call Log menu.
2. If "Dial Number" is chosen and an external line is available, the system calls the number. The "Called Back" code (indicated by a C to the right of the phone number) will display even if the line is busy.



Note: If 10-digit dialing is required in your local area code and only the 7-digit number shows, the call attempt may fail. See Setting Area Code in Chapter 6 of this Owner's Manual.

3. If "Save to Directory" is chosen, the handset exits the Call Log and stores the number using the name and number data from the Call Log entry. The user may modify the call log entry before saving to the directory. If the directory memory is full, an error tone sounds.

Note: The "Dial Number" and "Save to Directory" options do not appear if the entry does not contain a phone number.

2.4GHz Multi-Handset Cordless Phone System

4. If “Delete Call Log” is chosen, you will be asked if you want to delete all entries. Press **OK** to delete all. Press **↶** or **Menu** to return to the previous screen, and no entries are deleted.

**Delete
All Entries?**



Note: If 10-digit dialing is required in your local area code and only the 7-digit number shows, the call attempt may fail. See setting Area Code in Chapter 6 of this Owner's Manual.

5. The “All Entries Deleted” screen will display if you select **OK**.

**All Entries
Deleted**

Chapter 5

Directory

The Directory feature allows you to store up to 120 frequently used phone numbers in a telephone book format. The number of entries that can be stored depends upon the length of the name and number. A directory can also be sent from one cordless handset to another without replacing any existing directory entries at the receiving handset. Directory entries are stored and displayed in alphabetical order.

Create or Add Directory Entry

1. Press **DIRCTRY**.
2. Press **ADD** to create an entry. See the box below for some guidance on entering and editing the text.




Jane Smith
555 1212

▲ ▼ ↵ OK

Note: Using keypad on the handset, you may enter letters or digits depending on how many times a key is pressed. For example, when entering a name, the "2" key enters "a" with one press, "b" with two presses, "c" with three presses, and "2" with four presses. Press the keys rapidly; if you pause, it jumps to the next space. Use the "" key to capitalize, and the "1" key to space. You may edit the entry using the ▲ and ▼ keys and the ↵ key deletes the character to the immediate left of the cursor.*

Note: For more text entry options, please refer to Chapter 6 Entering Letters and Punctuation.

3. Enter a name (up to 16 characters), and then press ► to go to the next line. Enter the telephone number and press **OK**. Select "Save Entry" and press **OK**. The display will show "Entry Stored."

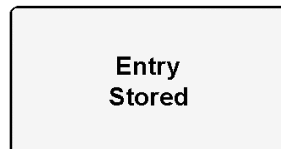

Entry
Stored

2.4GHz Multi-Handset Cordless Phone System

Select an Entry

Once you have entered names and numbers in the directory, you can dial them, edit them, or send them to another handset. To work with an individual entry, you must first select it.

1. Press **DIRCTRY**.
2. Either scroll to the name you want to select, or press the key to go to entries beginning with a particular letter, (e.g., press the 3 key twice to go to entries beginning with the letter E.)

Place a Call

1. To place a call from the Directory, press **DIRCTRY** and scroll with the **▲** and **▼** keys to select the number you would like to dial. You may also access names within the Directory by entering the first letter of the entry (e.g., pressing the "6" key twice to get "n" if you want to reach "Nancy.")
2. Press **Talk** to connect.

Edit an Entry

Each directory entry has in the Directory two fields that can be edited: the name and the number.

1. Select the entry you want to edit (see Select an Entry, above) and Press **OK**.
2. Select "Edit Entry." Press **OK**. The name will start flashing indicating you can change it.
3. To overwrite the whole name, start entering the new name.
4. To edit the number, press **►** until the number starts flashing.
5. To overwrite the whole number, start entering the new number.
6. When finished editing the entry, press **OK**.
7. Press **OK** again to "Save Entry."

Delete an Entry

1. Select the entry you want to delete (see Select an Entry, above) and Press **OK**.
2. Select "Delete Entry" and press **OK**.
3. The screen will display "Entry Deleted."
4. Press **End** to exit the directory .

Send an Entry

Directory entries can be copied from one handset to another.

1. Select the entry you want to send (see Select an Entry, above) and press **OK**.
2. Scroll to "Send Entry." Press **OK**.

2.4GHz Multi-Handset Cordless Phone System

3. Enter the number of the handset to which the directory entry should be sent (e.g., "Handset 2"), and press **OK**.
4. Handset 2 will start ringing.
5. Press **Talk** on Handset 2. "Data Transfer in Progress" will be shown in the display. Handset 1 will then show the next item in the directory after the transfer has been completed.

Delete Directory

If you want to delete the entire directory in a handset,

1. Press **Menu**.
2. Select "Directory" and press **OK**.
3. Select "Delete Directory" and press **OK**.
4. When the display shows "Delete All Entries?," press **OK**.
5. The display shows "All Entries Deleted."
6. Press **End**.

Send Directory

You can transfer all the unique entries from one handset to another, so that you do not have to manually store them in each handset. If the other handset does not have enough storage space, an error tone sounds and the transfer process does not complete.

1. Press **Menu**.
2. Select "Directory" and press **OK**.
3. Select "Send Directory" and press **OK**.
4. Enter the number of the handset to which the directory entries should be sent and press **OK**.
5. That handset will start ringing. Press **Talk** on the ringing handset.
6. When the transfer is complete, press **End** on the first handset.

Memory Available

You can check how much memory is available for your directory.

1. Press **Menu**.
2. Select "Directory" and press **OK**.
3. Select "Memory Available" and press **OK**.
4. Display shows what percentage of the directory memory is not in use.
5. Press **End**.

Chapter 6

Personalizing Your System

Language

Your multi-handset cordless phone system phone has two languages: English and Spanish.

To select Spanish (or English),

1. Press **Menu**.
2. Select "**Handset Settings**" press **OK**.
3. Select "**Language**" and press **OK**.
4. Select English or Español. A checkmark will appear by the language you have selected. Press **OK**.
5. If you accidentally change to Spanish, you can revert back to English by pressing Menu and then selecting "**Config. Telefono**," "**Idioma**," and "**English**."
6. Press **End** or **Menu** when finished.

Assign Handset Name

You may personalize the handset(s) and the base unit with names of your choosing. This feature allows you to associate a name with a particular handset and operates like Caller ID for internal (intercom) calls.

1. Press the **Menu** key.
2. Select "**System Settings**" and press **OK**.
3. Select "**Assign Name**."
4. Select the handset (or base unit) you want to name. The screen will display a generic name for the handset such as "Handset 1."
5. Enter a new name by using the handset keypad and press **OK**. (See below for instructions on entering capital letters, punctuation, and spaces.)
6. Press **OK** again to save the new name and press **End** when finished.

<i>Note: Names cannot contain more than 16 characters.</i>
--

2.4GHz Multi-Handset Cordless Phone System

Entering Letters and Punctuation

You can use the numeric keys to enter alphanumeric text. The directory and assigned handset names are examples of alphanumeric text. Phone numbers and area codes are examples of numeric entries.

The chart below outlines which key is associated with a symbol, letter, or corresponding number. For example, depending on the number of times pressed, the "2" key enters either "a", "b", "c", "2" or "á."

Key	1 st	2 nd	3 rd	4 th	5 th	6 th	7 th	8 th
1	Space	&	@	'	,	.	-	1
2	a	b	c	2	á			
3	d	e	f	3	é			
4	g	h	i	4	í			
5	j	k	l	5				
6	m	n	o	6	ñ	ó		
7	p	q	r	s	7			
8	t	u	v	8	ú			
9	w	x	y	z	9			
0	0							
*	Shift	*						
#	#							

To shift to uppercase, press the *key once and then press the appropriate key to display the desired upper case alphabetic character. The * key does not create a "shift lock" condition. You must press the *key to shift to uppercase for each character. To insert a space (for example, between a first and last name), press the "1" key once. To insert one of the punctuation symbols, press "1" until the item you want is displayed. If you pass the letter or symbol you want, continue pressing the key and going through the list. When the last item for that key is displayed, pressing the key again will start the list over.

Setting Area Code

You may configure the system (under "System Settings," "Area Codes") to use the local area code (used for dialing seven-digit numbers) and up to three extra area codes which do not require a "1." These extra area codes are used for dialing 10-digit phone numbers in large cities where local calls use multiple area codes.

- If the area code in the Caller ID matches the local area code, then the call is marked as "local" and the entry will contain the 7-digit number only.

2.4GHz Multi-Handset Cordless Phone System

- If the area code in the Caller ID matches one of the “extra” local area codes, the call is marked as “extra.” The system leaves the area code intact when storing the number to the directory or dialing the number from the call log. The entry will contain and dial the full 10-digit number (Area Code + Number).
- If the area code in the Caller ID matches neither the local area code nor one of the “extra” local area codes, it is not marked as either “local” or “extra.” The system leaves the full number intact and adds a “1” to the front of the number when storing the number to the directory. When storing to the directory or dialing from the call log, the entry will contain “1 + Area Code + Number.”

Setting Area Code for 7-digit Dialing

If you dial local calls using seven digits (for example: 555-1212), then follow these steps to set up your phone to automatically dial numbers from your Call Log:

1. Press **Menu**.
2. Select “System Settings” and press **OK**.
3. Select “Area Codes” and press **OK**.
4. Select “Local Code:” and press **OK**.
5. Enter your local area code and press **OK**.
6. Select “Save Entry” and press **OK**.
7. If there are other area codes for which you dial 10 digits (you don’t have to dial a “1” first), enter those area codes as “Extra Codes.”

Setting Area Code for 10-digit Dialing

If you dial local calls using ten digits (for example: 303-555-1212), then follow these steps to set up your phone to automatically dial numbers from your Call Log:

1. Press **Menu**.
2. Select “System Settings” and press **OK**.
3. Select “Area Codes” and press **OK**.
4. Select “Extra Code:” and press **OK**. Note: “Local Code” should remain blank.
5. Enter your area code and press **OK**.
6. Select “Save Entry” and press **OK**.
7. If there are other area codes for which you dial 10 digits (you don’t have to dial a “1” first), enter those area codes as other “Extra Codes.”


2.4GHz Multi-Handset Cordless Phone System

Ringer

You may select the volume of individual handset ringers.

Ringer Volume

1. Press **Menu**.
2. Select **"Handset Settings"** and press **OK**.
3. Select **"Ringer Settings"** and press **OK**.
4. Select either **"External Ringer"** or **"Intercom Ringer"** and press **OK**.

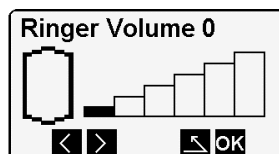

Note: Both can be adjusted, but they can only be adjusted one at a time.

5. Select **"Ringer Volume"** and press **OK**. The handset will start ringing.
6. Use the **▲** and **▼** to adjust the volume. There are seven positions including mute. Volume level 6 represents the highest, while volume level 0 (the icon of a bell with an x through it) represents mute.
7. Press **OK** when the ringer volume is set to the desired level. An acknowledgement tone sounds, and the handset returns to the previous menu.

*Note: Press **End** prior to Step 7 to exit without saving changes.*

Ringer Pitch

You may also change the pitch of individual handsets.

1. Press **Menu**.
2. Select **"Handset Settings."** Press **OK**.
3. Select **"Ringer Settings."** Press **OK**.
4. Select either **"External Ringer"** or **"Intercom Ringer."** Press **OK**.



Note: Both can be adjusted, but they can only be adjusted one at a time.

5. Select **"Ringer Pitch"** press **OK**. The handset will start ringing.
6. Use the **◀** and **▶** keys change the pitch up and down. There are sixteen positions.
7. Press **OK** when set to the desired pitch. An acknowledgement tone sounds and the handset returns to the previous menu.

Factory Defaults

Select **"Factory Defaults"** to return the handset to the factory settings.

Chapter 7



Additional Handsets and Chargers

You may, at your option, purchase from Qwest additional handsets and chargers for your system. Up to four cordless handsets may be used with your base station. The four handsets include the one handset that comes with the base and up to three additional handsets. The handset that comes with the base is pre-registered to work with the base. You must register additional handsets so that they will also work with your base. Only handsets purchased from Qwest will work with your system.

Registering Additional Handsets

To register additionally purchased handsets,


1. Turn the handset on by pressing the **Pwr** button.
2. The handset screen will display "Please Register."
3. Press the **OK** soft key to begin registration mode.
4. The handset screen will display "Searching."
5. Within 3 minutes of pressing **OK**, hold down the **Flash** key on the base until the "In Use" light on the speakerphone starts flashing.
6. When the base and handset connect, the handset display will allow you to select an intercom number associated with that handset. Valid selections are 1-4. Only unused numbers are displayed.
7. When the selection is made, the screen will display "Handset X Registered."

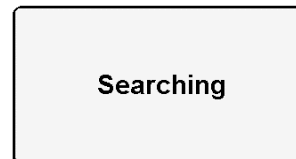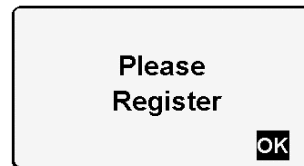

2.4GHz Multi-Handset Cordless Phone System

Charger for Additional Handsets

The charger cradle can be installed on a flat surface or mounted on the wall. It must be connected to an AC power outlet.

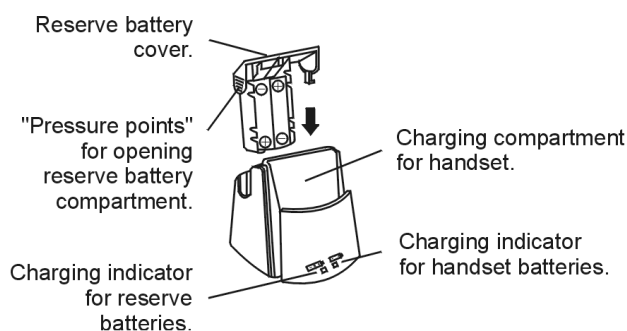


There are two battery charge icons in the lower left corner of the charger cradle. The light under the icon on the right indicates whether the cordless handset's batteries are being charged. It should be ON when charging.

Note: The battery charge icon lights may turn OFF periodically during charging. This is normal.

Charger Reserve Compartment

You may purchase two spare AA rechargeable Ni-MH batteries and store them in the charger reserve



compartment in the back of the charger cradle. The "R" on the left icon on the charger cradle stands for "Reserve." The light under this icon indicates whether the batteries in the charger cradle's spare battery compartment are charging.

DO NOT use non-rechargeable batteries. When you replace the batteries, replace both batteries.

Optional Headsets

A headset with a 2.5 mm plug can be purchased separately and used with the handset. Plug the headset into the socket on the side of the cordless handset.

Chapter 8

Troubleshooting

If you are having trouble with your multi-handset cordless phone system, please try the suggestions below. If you still have trouble, contact Customer Service.

Customer Service

- If within the first 30 days after the receipt of the phone, call Qwest telephone products customer service at 1-800-770-2513.
- If after the first 30 days after the receipt of the phone, call the manufacturer's customer service at 1-888-777-0211.

Symptom	Possible Cause
The phone does not work at all	• Make sure the power cord is plugged into the base and the electrical outlet not controlled by a wall switch. • Make sure handset batteries are installed properly and fully charged.
No power on base	• Check connections at wall and base. • Plug base into a different electrical outlet. • Check outlet for power by plugging other electrical devices into it.
No power on handset	• Check battery orientation in handset. • Make sure handset batteries are fully charged. • Batteries may need to be replaced; use only AA Ni-MH batteries. • Put the handset in the charger or base cradle. It should turn on.

2.4GHz Multi-Handset Cordless Phone System

No dial tone	• Make sure the power cord is plugged into the base and the electrical outlet not controlled by a wall switch. • Make sure the base unit is plugged into the telephone wall jack. • Make sure the handset batteries are installed properly and fully charged. • Try your Multi-Handset cordless phone system in a different jack and/or a different phone in that jack. If your phone works in a different jack, or no phone works in the existing jack, the problem is in your wiring or local service.
Handset(s) cannot make Outgoing Calls	• Make sure the handset(s) are within range of the base unit. • Cycle power on handset by pressing the PWR button firmly until the screen goes blank, and then press it firmly again. • Cycle power on base station by unplugging power supply and plugging back in. • Dial "Int 0" from the handset. If the base unit doesn't ring, call Customer Service.
Handset(s) doesn't ring on Incoming Call	• Make sure the handset(s) are within range of the base unit. • Make sure ringer is ON and volume is loud enough to hear. • Make sure the batteries are fully charged. • Cycle power on handset by pressing the PWR button firmly until the screen goes blank, and then press it firmly again. • Cycle power on base station by unplugging power supply and plugging back in. • Dial "Int 0" from the handset. If the base unit doesn't ring, call Customer Service.
No Caller ID	• Make sure you subscribe to the service. • See Chapter 4.
Can't Join a Call	• Only two handsets (or one handset and the base speakerphone) may be used on external line simultaneously.

2.4GHz Multi-Handset Cordless Phone System

Can't Transfer a Call	• Make sure transferring to an active intercom number. • Make sure handset you are transferring to is not in Room Monitor mode.
Static, noise	• Check connections. • Make sure you are within "range" of the base unit. • Look for possible interfering devices (e.g., microwave ovens). • Move handset or base to a different location.
Handset displays "-----"	• Press any key on the handset. Handset should start to search for and find the base station. • If it recurs, cycle power on the base station.
Handset displays name other than assigned name	• Cycle power on handset by pressing the Pwr button firmly until the screen goes blank, and then press it firmly again.

2.4GHz Multi-Handset Cordless Phone System

FCC Wants You to Know

Federal Communications Commission Requirements

This telephone system complies with Part 68 of the FCC rules. On the bottom of the base station is a label that contains, among other information, the FCC Registration Number, Ringer Equivalence number (REN) and the Universal Service Order Code (USOC), which is RJ-45, for this equipment. You must, upon request, provide this information to your telephone company. The REN is useful to determine the quantity of devices you may connect to your telephone line and still allow all of those devices to ring when your telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company. If your telephone equipment causes harm to the telephone network, the telephone company may ask you to disconnect the system from the line until the problem has been corrected or they may discontinue your service temporarily. If possible, they will notify you in advance.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your telephone system. If they do, if possible you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning. Do not attempt to repair or modify this equipment. Changes or modifications not expressly approved by the party responsible for its compliance could void the user's authority to operate the equipment. This telephone system may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. If trouble is experienced, disconnect this equipment from the telephone line to determine if it is causing this malfunction. If the equipment is determined to be malfunctioning, its use should be discontinued until the problem has been corrected. Current FCC regulations specify that any direct connections to a telephone company line be done using only standard phone jacks and plugs that meet FCC regulations. Privacy of communications may not be ensured when using this phone.

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs; to minimize or prevent such interference, the system base should not be placed near or on top of a TV, PC monitor, or VCR; and, if interference is experienced, moving the desk station farther away from the TV or VCR will often reduce or eliminate the interference. However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the base station and receiver.
- Connect the base station to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.


NOTICE TO HEARING AID WEARERS: This phone system is compatible with inductively coupled hearing aids.

2.4GHz Multi-Handset Cordless Phone System

Care and Maintenance



Keep the system dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.



Use and store the system only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.



Keep the system away from excessive dust and dirt that can cause premature wear of parts.



Wipe the system with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the system.

Limited Warranty

The manufacturer Warrants, to the original purchaser only, the material and workmanship of this product for ONE YEAR from the date of purchase. The manufacturer will repair or replace, at our option, this product without charge should it fail due to a defect in material or workmanship within that time period. AA Nickel Metal Hydride batteries are warranted to be free from defects at the time of purchase.

This warranty does not apply to loss or damage that is the result of accident, misuse or negligence. All other warranties, expressed, implied, or statutory, including warranties of fitness for a particular purpose, are limited to the time period listed and are otherwise excluded from this warranty. The manufacturer, may, at its option, void the warranty if unauthorized repairs are attempted. Additionally, the manufacturer shall not be liable for any incidental or consequential damage or commercial loss, nor for any other loss or damages.

The manufacturer assumes no responsibility for products sent without prior **Return Authorization**.

To arrange service, in or out of warranty, please call **Customer Service** at 1-888-777-0211. For warranty service, proof of purchase is required.

2.4GHz Multi-Handset Cordless Phone System

INDEX

- Additional Handsets, 31
- Answering Calls, 11
- Area Code Settings, 28
- Backlight Handset, 15
- Batteries, 8, 9
- Battery Door Cover, 8
- Battery Safety, 4
- Belt Clip, 8, 10
- Box Contents, 8
- Call Log, 20, 21
- Call Pending, 17
- Call Timer, 15
- Call Transfer, 16
- Call Wait ID, 20
- Call Waiting, 16
- Caller ID, 20
- Care/Maintenance, 37
- Charging Contacts, 7
- Charging Cradle, 32
 - Reserve Compartment, 32
- Consultation Call, 17
- Diagram, Base, 7
- Diagram, Handset, 6
- Directory, 24
 - Access Directory, 24
 - Create/Add, 24
 - Delete Directory, 26
 - Delete Entries, 25
 - Edit Entries, 25
 - Memory, 26
 - Place Calls, 25
 - Select an Entry, 25
 - Send Directory, 26
 - Send Entries, 25
- End, 11
- Ending Calls, 12
- Factory Defaults, 30
- Flash, 16
- Handset Display, 6
- Handset Microphone, 6
- Handset Names, 27
- Handset Volume, 12
- Headset, 32
- Hold, 11, 14
- In Use Light, 7
- Installation, Base, 9
- Installation, Belt Clip, 10
- Installation, Handset, 8
- Intercom, 13
- Internal (Intercom) Calls, 13
- Joining a Call, 17
- Language, 27
- Line In Use Indicator, 7
- Low Battery Indication, 15
- Making Calls, 12
- Menu, 11
- Message Waiting Indicator, 15
- Mute, 16
- Out of Range, 15
- Pay-Per-Use, 18
 - Auto Call Back, 18
 - Cancel Call Waiting, 18
 - Repeat Dial Off, 18
 - Repeat Dialing, 18
 - Service, 18
- Power Light, 7, 9
- Power Supply, 10
- Predialing, 12
- Pulse Dialing, 19
- PWR, 31
- Redial, 13
- Registering Handsets, 31
- Ringer, 30
 - External, 30
 - Internal, 30
 - Pitch, 30
 - Volume, 30
- Room Monitor, 18
- Safety Warnings, 3
- Soft Keys, 11
- Spanish Instructions, 39
- Speakerphone Volume, 12
- Talk, 11
- Temporary Tone, 19
- Three Way Calling (Conference), 18
- Troubleshooting, 33
- Warranty, 37

Tabla de Contenido

¡Felicidades! 39

Capítulo 1 - Instalación..... 40

Capítulo 2 - Funciones básicas de su teléfono..... 43

Capítulo 3 - Funciones..... 48

Capítulo 4 - Identificación de Llamadas y Lista de Llamadas..... 54

Capítulo 5 - Guía Telefónica..... 57

Capítulo 6 - Personalizando Su Sistema..... 61

Capítulo 7 - Teléfonos Adicionales 66

Instrucciones importantes 68

Garantía Limitada 70

Índice 71

¡Felicidades!

Usted acaba de adquirir un Sistema Telefónico Inalámbrico de teléfonos múltiples de 2.4GHz de Qwest que ha sido fabricado con los mejores estándares de Qwest.

Expanda el teléfono inalámbrico en un sistema de una línea para el hogar o un sistema de negocio agregándole tres teléfonos inalámbricos adicionales. Todos los teléfonos inalámbricos trabajan juntos y sólo se requiere una entrada de línea telefónica para todo el sistema.

PARA APROVECHAR TODOS LOS BENEFICIOS DE ESTE SISTEMA TELEFÓNICO, ES IMPORTANTE QUE LEA ESTE MANUAL DE USUARIO.

Capítulo 1

Contenido de la caja del sistema

Antes de instalar su sistema de teléfonos inalámbricos inspeccione el empaque de embarque para asegurarse que tenga lo siguiente:

- Base
- Auricular
- Fuente de poder
- Guía de inicio rápido
- Manual de usuario
- Juego de accesorios para el auricular
 - Sujetador al cinturón
 - 2 Pilas AA de Ni-MH
 - Tapa del compartimiento de la pila

Notas:

Conserve el empaque de embarque del producto por si necesita transportar su teléfono.

No use su equipo si está dañado. Contacte a su representante de Qwest al 1-800-770-2513 para obtener la autorización para la devolución.

2.4GHz Multi-Handset Cordless Phone System

Instalación

Instalación de su auricular

Los teléfonos inalámbricos funcionan con pilas recargables AA de níquel hidruro (Ni-MH). Las pilas se cargan automáticamente cuando el auricular se coloca sobre la cuna de la base o la cuna del cargador de mesa adquirida por separado.

¡Advertencia! Solo use pilas Ni-MH. No use pilas alcalinas, Ni-Cad o de litio.

1. Coloque 2 pilas AA recargables de Ni-MH en el compartimiento para pilas del auricular. Deslice la tapa de las pilas firmemente por los surcos hasta que se cierre. Vea la ilustración a continuación.
2. Coloque el auricular en la cuna de la base o del cargador opcional. Se encenderá la luz de la base o del cargador.
3. Las pilas deben cargarse por completo durante 12 a 14 horas antes de usar el teléfono. Posteriormente las pilas requerirán menos tiempo para cargarse.

Instalación de la base

Para una ejecución óptima,

1. Instale la base LEJOS de aparatos eléctricos como televisores, computadoras personales, hornos de microondas u otros teléfonos inalámbricos.
2. Use el auricular LEJOS de hornos de microondas u otros teléfonos inalámbricos.

¡Advertencia! Solo use la fuente de poder AC suministrada con este teléfono. NO use un enchufe que esté controlado por un apagador de pared.

2.4GHz Multi-Handset Cordless Phone System


Nota: Coloque la base sobre una superficie plana y dura. No se puede montar sobre la pared. Se necesita que esté conectada a un enchufe telefónico de pared y a una salida estándar de 110/120 voltios.

4. Enchufe la fuente de poder AC a un enchufe estándar de 120 V AC de pared.
5. Localice el conector (RJ45) más grande de los dos y conéctelo en la parte trasera de la base.
6. La luz de encendido (**Power**) se iluminará en la base.
7. Enchufe el conector (RJ45) más pequeño de los dos al enchufe telefónico de pared estándar de 120 voltios.

Instalar el sujetador al cinturón

El instalar la pinza del cinturón le permite transportar el auricular en el cinturón.

1. Remueva el sujetador cinturón del juego de accesorios del auricular. Coloque el sujetador cinturón en la parte superior de la parte trasera del auricular.
2. Deslice el sujetador cinturón en su lugar tal como .
3. Abroche los pasadores en el interior de los brazos del sujetador al cinturón en los hoyos de pasador cerca del auricular.

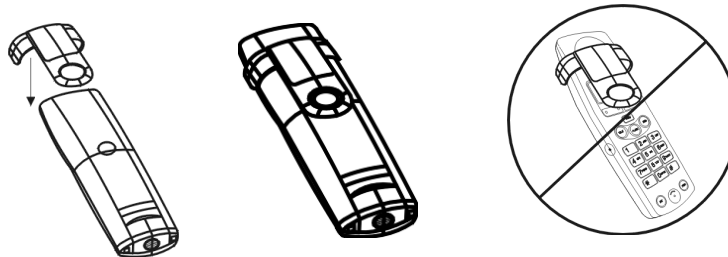

Capítulo 2

Funciones básicas de su teléfono

Hasta cuatro teléfonos inalámbricos se pueden utilizar con su estación de base. Los cuatro teléfonos inalámbricos incluyen el teléfono inalámbrico que viene con la base y hasta tres teléfonos inalámbricos adicionales. El teléfono inalámbrico que viene con la base ya está dada de alta para funcionar con la base. Debe dar de alta los demás teléfonos inalámbricos para que también funcionen con su base. Para las instrucciones de cómo dar de alta teléfonos adicionales, vea el capítulo 7 en la página 66 de este manual.

Cualquier combinación de dos teléfonos inalámbricos (o de un teléfono y el altavoz de la base) pueden participar de llamadas al mismo tiempo. Por ejemplo, el segundo teléfono inalámbrico y el altavoz de base pueden encontrarse ocupados con una llamada externa, mientras que los teléfonos primero y cuarto (auricular 1 y auricular 4) estén hablando simultáneamente en una llamada de intercomunicación interna.

Las funciones del auricular se pueden acceder mediante las teclas duras dedicadas (**Talk**, **Flash**, **End**, **Menu**, **Int**) o las teclas suaves localizadas directamente debajo de la pantalla. La función de la teclas suave se define por el texto o icono que se encuentra directamente arriba de ellas. Por ejemplo, primero oprima la tecla dura llamada **Menu**. La pantalla se verá similar al ejemplo que se muestra aquí. El oprimir las teclas suaves que se encuentran debajo de las flechas  y  hará que el cursor se desplazca por las opciones del menú. La línea segmentada en la lista de opciones indica que es el final de la lista del menú. Si se oprime la tecla suave debajo de  hará que se seleccione la opción resaltada. Si se oprime la tecla suave debajo de  regresará al nivel anterior del menú. Si se oprime firmemente en la tecla **End** (Fin) hará que se salga de todos los menús.

2.4GHz Multi-Handset Cordless Phone System

Para acceder las funciones en el altavoz de la base, use las teclas duras dedicadas en la base: **Redial**, **Intcm** (Intercomunicación), **Hold**, **Flash**, **Mute**, **Spkr** (Altavoz) y **Vol** (volumen del altavoz).

Idioma

Su teléfono tiene dos idiomas: inglés y español.

Para seleccionar español (o inglés),

1. Oprima **Menu**.
2. Seleccione "Handset Settings" y oprima **OK**.
3. Seleccione "Language" y oprima **OK**.
4. Seleccione English o Español. Una palomilla aparecerá junto al idioma que ha seleccionado. Oprima **OK**.
5. Si ha cambiado accidentalmente al inglés, puede regresar al español oprimiendo **Menu** y seleccionando "Handset Settings", "Language" y "Español".
6. Oprima **End** o **Menu** cuando termine.

Inicio y terminación de llamadas

Contestación de llamadas

Hay dos formas de contestar una llamada entrante.

Auricular

Oprima el botón **Talk**.

Altavoz

Oprima el botón **Spkr**.

Llamadas externas

Auricular

1. Levante el auricular.
2. Marque el número (hasta de 32 dígitos).

2.4GHz Multi-Handset Cordless Phone System

Para borrar el carácter a la izquierda del cursor, oprima el .

Para insertar un carácter, use la tecla use  o  para posicionar el cursor

Para introducir una pausa, oprima la tecla Flash.

3. Oprima **Talk** para conectar a la línea telefónica y marcar el número.

Altavoz

1. Oprima la tecla **Spkr** para obtener el tono de marcación.
2. Marque el número con el teclado de la base después de escuchar el tono de marcación.

Para ajustar el volumen

Auricular

Cuando se está en una llamada, oprima las teclas suaves:  **Vol** .

Altavoz

Cuando se está en una llamada en el altavoz de una base, oprima la tecla hacia arriba o hacia abajo con el nombre **Vol** en la base.

Llamadas internas (llamadas de intercomunicación)

Puede hablar con otra persona usando el auricular o la base sin tener que usar una línea telefónica externa.

Auricular

1. Oprima la tecla **"Int"** en el auricular.
2. Cuando escuche el tono de marcación interno (tres pitidos cortos seguidos de una pausa), anote el número del auricular al cual desea llamar (un número entre el 1 y 4) o introduzca el 0 para llamar a la base.
3. Oprima la tecla **"**"** o la tecla suave **ALL INT** para llamar a todos los teléfonos inalámbricos. Todos los teléfonos timbrarán, pero solo uno puede tomar la llamada.

2.4GHz Multi-Handset Cordless Phone System

4. La persona a la que se está llamando oprime ya sea **Talk** en el auricular o **"Intcm"** en la base para contestar.
5. Cuando termine la llamada oprima **End** una vez o devuelva el auricular a la base (o el cargador) para desconectar la llamada.

Altavoz

Para hacer una llamada interna usando el altavoz de la base,

1. Oprima **"Intcm"** en la base.
2. Cuando escuche el tono de marcación (tres pitidos cortos seguidos por una pausa), introduzca el número del auricular al que desea hablar (un número entre 1 y 4) u oprima * para llamar a todos los teléfonos (aunque solo uno puede contestar).
3. La persona a la que se esté llamando debe oprimir ya sea **Talk** en su auricular o **Intcm** en la base para contestar.
4. Cuando termine oprima **"Intcm"** en la base o End en el auricular.

Remarcado

Usted puede remarcar cualquiera de los últimos cinco números externos marcados desde el auricular o el último teléfono marcado desde el altavoz.

Auricular

1. Oprima la tecla suave de **REDIAL**.
2. Use las teclas  y  para leer los números que se pueden remarcar y la tecla **Talk** para marcar el número en la pantalla.

<i>Nota: Los números de remarcado son únicos para cada auricular.</i>

Altavoz

En la base, oprima **REDIAL**. Se hará una llamada al último número marcado desde la base.

Retención

Las llamadas externas se pueden colocar en retención mientras que las llamadas internas (de intercomunicación) no pueden retenerse. Cualquier teléfono del sistema,

2.4GHz Multi-Handset Cordless Phone System

altavoz de la base o teléfono paralelo (que no sea del sistema) en su hogar puede retomar una llamada en retención.

Auricular

1. Oprima la tecla suave **HLD**.
2. El icono de "line in use" (línea en uso) en la esquina superior izquierda de la pantalla del auricular comenzará a parpadear. Para retomar la llamada, oprima la tecla **Talk**.

Altavoz

1. Oprima **"Hold."** Comenzará a parpadear.
2. Para retomar la llamada, oprima **"Hold"** o **"Spkr."**

<i>Nota: Si hay dos personas en teléfonos internos llamando a la línea externa. Si una persona oprime la tecla Hold en uno de los dos teléfonos internos causa que este teléfono salga de la llamada. La otra persona seguirá conectada a la llamada externa.</i>

Capítulo 3



Funciones

Luz de fondo automática

La pantalla en el auricular se ilumina cuando se presiona una tecla y se conserva iluminada durante varios segundos.

Fuera de rango

Si intenta hacer una llamada o prender su auricular cuando se encuentra demasiado lejos de la base, escuchará una advertencia de fuera de rango (cuatro pitidos muy rápidos). La pantalla del auricular mostrará "Searching" (Buscando) y el símbolo de fuera de rango parpadea. Acérquese más a la base y vuelva a intentar.

Indicador de pila baja

Cuando la pila empieza a descargarse aparecerá un icono la pila en la pantalla en el auricular. Un icono de pila claro y un pitido largo cada 30 segundos es la señal de que una pila está muy baja. Devuelva el auricular a su base o al cargador opcional.

Tiempo de llamada

Un cronómetro de tiempo de llamada que se encuentra en la esquina superior derecha de la pantalla del auricular registra la duración de la llamada. Empieza a tomar tiempo desde el momento en que reciba un tono de llamada. Termina de tomar tiempo cuando se desconecta la línea.

2.4GHz Multi-Handset Cordless Phone System

Indicador de mensaje en espera

Si está suscrito al servicio de Qwest de Buzón Telefónico, tanto el auricular como la estación de base le indicarán que tiene un mensaje en espera. En el auricular aparecerá un sobre en medio de la primera línea de la pantalla del teléfono. En la estación de base, la luz de **"Messages"** se encenderá.

Transferencia

Transferir una llamada involucra mover una llamada externa de un auricular a otro. Las llamadas internas (de intercomunicación) no se pueden transferir. Hay dos tipos de transferencias: anunciadas y no anunciadas.

Transferencia anunciada

1. Coloque una llamada externa en espera (vea la página 47).
2. Haga una llamada interna a otro auricular (un número entre 1 y 4), o marque el 0 para llamar a la base.
3. Anuncie la llamada a la persona que contesta.
4. Cuelgue su teléfono.
5. La persona que recibe la llamada oprime **Talk** o **"Spkr"** para aceptar la llamada.

Transferencia no anunciada

1. Oprima **"Int"** durante una llamada externa en el auricular o **"Intcm"** en la base.
2. Haga una llamada a otro auricular (un número entre 1 y 4), o marque el 0 para llamar a la base.
3. La llamada timbrará en el auricular que llamó. Los demás auriculares (o el altavoz) mostrarán una línea sólida que indica que el teléfono está en uso.
4. Si la llamada transferida no se contesta en 30 segundos, la llamada regresa a la persona que contestó originalmente.

<i>Nota: También puede iniciar una transferencia no anunciada oprimiendo Int* y cualquier otro auricular puede contestar.</i>

2.4GHz Multi-Handset Cordless Phone System

Llamada de consulta

Puede hacer una consulta a otra persona interna mientras que esté en una llamada externa.

1. Coloque la llamada externa en retención.
2. Marque a la persona interna (intercomunicación).
3. Converse con la persona interna. Oprima **End** o **"Intcm"** para terminar con la llamada interna.
4. Retome la llamada origina oprimiendo la tecla **Talk** o **Spkr**.

Llamada en original pendiente

Cuando esté en una llamada interna el sistema le alerta que se está recibiendo una llamada externa.

1. Los teléfonos que no son del sistema (paralelos) timbrarán.
2. Llamadas no en el sistema timbrarán.
3. Oprima **Talk** o la tecla suave **Accept** en el auricular. En la base, oprima la tecla **Spkr** (ésta estará parpadeando) para aceptar la llamada.
4. Ambas personas en la llamada interna estarán ahora conectadas a la línea externa.

Intromisión de llamada

El levantar ya sea un auricular del sistema u otro teléfono de la casa le permitirá accesar la línea externa a menos que más de dos teléfonos inalámbricos (o teléfonos inalámbricos y el altavoz) traten de tomar la línea. Si más de dos teléfonos del sistema tratan de contestar la llamada o si el auricular del sistema trata de contestar una llamada con dos teléfonos inalámbricos ya conectados, resultará en un tono de error.

<i>Nota: Un teléfono de casa paralelo (que no sea del sistema) puede tener acceso a la línea externa aún si dos teléfonos inalámbricos del sistema están en la línea.</i>

2.4GHz Multi-Handset Cordless Phone System

Funciones de Llamadas

Use su auricular para acceder fácilmente las funciones de llamadas de **Qwest**. Las funciones de llamadas de Qwest se ofrecen por suscripción o cobrados por cada vez que se usan. Para más información acerca de las funciones de llamadas en su área, contacte a su representante de Qwest.

1. Oprima **Talk**.
2. La pantalla mostrará "Service" (Servicio). Tiene 5 segundos para seleccionar esta función.
3. Desplácese a la función que desee y oprima **OK**.
4. El sistema marcará el "código de estrella" apropiada para la función (* se marca automáticamente).
 - *70 para cancelar Llamada en Espera,
 - *69 para Devolver Llamada Automáticamente (marcación de la última llamada)
 - *66 para Marcado repetida (marcación continua)
 - *67 para Marcado repetida apagado (cancelar marcación continua).
5. Si se selecciona "Devolver Llam." Ada automáticamente o "Marcado Repetida", la pantalla mostrará el mensaje: "Posible costo adic." durante 2 segundos.
6. Después de cancelar el Llamada en Espera (la pantalla muestra *70), puede usar la Guía Telefónica para hacer una llamada. Seleccione **OK**, **Menu**, **OK**, seleccione el registro de la Guía Telefónica y oprima **Talk**.
7. Oprima **End** en cualquier momento para poner el auricular en estado de espera (sin usarse).

Llamada de Tres en Línea (Conferencia)

La llamada de tres en línea puede usarse en cualquier momento durante una llamada externa si se desea añadir una tercera persona a la llamada.

1. Cuando desee añadir a una tercera persona (una tercera línea externa), oprima **3WAY** en la pantalla. Aparecerá la leyenda "Posible costo adic." durante 2 segundos en la pantalla.
2. La pantalla luego le indicará "Please dial (por favor marque)" (u oprima **Menu** para ir a la Guía Telefónica).

2.4GHz Multi-Handset Cordless Phone System

3. Puede introducir el número de la tercera persona directamente en el teclado y oprima **3WAY** de nuevo para unir a todas las partes. También puede marcarle a la tercera persona a través de la guía telefónica oprimiendo **Menu**, seleccionando "Directory" (Directorio), oprimiendo **OK** y desplazándose a través de la Guía Telefónica hasta resaltar el número deseado. Oprima **Talk** para marcar el número y después oprima **3WAY** para unir todas las partes.
4. El oprimir **3WAY** de nuevo desconectará a la tercera persona.

"Monitor Room" Monitoreo de habitación

Puede usar uno o más teléfonos inalámbricos para alertarle acerca de ruidos en el rango auditivo del auricular. Por ejemplo, puede monitorear las actividades en otra parte de su casa.

Nota: debe tener más de un auricular dado de alta en la base para que pueda operar la función de Monitoreo de Habitación.

Para usar la función de Monitoreo de Habitación,

1. Oprima **Menu**.
2. Seleccione usando las teclas **▲** y **▼** para desplazarse por el menú y oprima **OK**.
3. Oprima **OK** hasta que se ponga una palomilla junto a la función de "Room Monitor" (Monitoreo de habitación).
4. Seleccione "Set Call Number" oprima **OK**.
5. monitoreo de habitación. El número del auricular a alertar debe ser diferente del auricular del que se está usando para el monitoreo de habitación. Oprima 0 para alertar el altavoz de la base. Oprima * para llamar a todos los auriculares y el altavoz de la base.
6. Oprima **OK**.
7. Seleccione "Set Level" (Fijar nivel) y oprima **OK**. Hay tres niveles de ruido que pueden generar una llamada. (Para fijar el nivel del monitoreo de la habitación use las teclas de flechas **▲** y **▼**. El nivel 1 requiere la menor cantidad de ruido para generar una llamada, el nivel 3 requiere la mayor cantidad.)
8. Oprima **OK** y luego **End (FIN)**.

2.4GHz Multi-Handset Cordless Phone System

Nota: el auricular permanece en la modalidad de Monitoreo de Habitación hasta que lo desactive esta función.

Para desactivar el Monitoreo de Habitación,

9. Seleccione "Room monitor" (Monitoreo de Habitación) ; oprima **OK**.
10. Oprima **OK** para remover la palomilla y luego **End** para regresar el auricular al estado de espera.

*Nota: Una llamada entrante no timbrará en los teléfonos inalámbricos que estén en la modalidad de Monitoreo de Habitación. Verá la llamada en la pantalla del auricular y puede contestarla oprimiendo **Talk**.*

Tono temporal

El sistema está configurado de fábrica para hacer marcación de tonos. Si su línea telefónica está programada para marcación de pulso, puede accesar las instalaciones de bancos y los contestadores de teléfono mediante el menú del DTMF temporal del auricular.

1. Oprima **Talk**.
2. Oprima **Menu**.
3. Desplácese a la tecla de "Temp DTMF ON/OFF."
4. Seleccione **OK**.
5. Marque el número. El auricular automáticamente regresa a su configuración original cuando termina la llamada.

Capítulo 4

Identificación de Llamadas y Lista de Llamadas

El servicio de Identificación de Llamadas y el servicio de Identificación de Llamadas en Espera son servicios de suscripción opcionales proporcionados por Qwest. El sistema genera el registro de la Identificación de Llamadas para cada llamada externa entrante (y para cada llamada en Llamada en Espera) que incluya la información de Identificación de Llamadas.

La información de Identificación de Llamadas se muestra en la pantalla del auricular. Muestra el nombre y el número de la persona que llama, además de la hora y fecha de la llamada.

Nota: Si no está suscrito al servicio Identificación de Llamadas, no podrá ver ni el nombre o el número de la persona llama.

La función de Lista de Llamadas almacena la información de las llamadas externas entrantes. La Lista de Llamadas mantiene una lista de las últimas 50 llamadas recibidas. Las llamadas en Llamada en Espera también están incluidas en esta lista si está suscrito al servicio de Identificación de Llamadas en Espera. Los registros se pueden ver uno a la vez y siempre se muestran en orden cronológico al revés, esto es, la llamada más reciente se muestra primero y al desplazarse hacia abajo en la Lista de Llamadas mostrará la siguiente llamada más reciente.

Información Almacenada en la Lista de Llamadas

Nombre de la Persona que Habla

El nombre de la persona que habla se exhibe tal como se recibe de la compañía telefónica. Si se reciben más de 16 caracteres, solo los primeros 16 aparecerán.

2.4GHz Multi-Handset Cordless Phone System

Hora y Fecha

La hora y la fecha se reciben como parte del mensaje de Identificación de Llamadas y se almacenan en la Lista de Llamadas. Si la información no se recibe como parte del mensaje, 00:00A y 00/00 se almacenará en la Lista de Llamadas como la hora y la fecha.

Llamadas Entrantes

La pantalla de llamada entrante muestra la llamada entrante en el segundo timbrado e incluye el nombre y el número del que habla.

Lista de Llamadas

La Lista de Llamadas contiene información de las llamadas entrantes externas. Usted puede mirar el registro, marcar el número asociado con el registro en la Lista de Llamadas, guardar el registro en la Guía Telefónica local del auricular, borrar el registro o borrar todos los registros en la Lista de Llamadas.

Múltiples teléfonos inalámbricos pueden acceder la Lista de Llamadas simultáneamente. Ya que cualquier auricular puede borrar registros, un registro se puede borrar mientras lo está viendo otro auricular. Si esto ocurre, el registro continuará apareciendo en el otro auricular hasta que el auricular seleccione otro registro.

Nota: Cuando el auricular está en la Lista de Llamadas y recibe una llamada entrante, sale de la Lista de Llamadas y muestra la información de la llamada entrante.

Entrando a la Lista de Llamadas

1. Oprima **Menú**.
2. Seleccione "Call Log" (Lista de Llamadas) y oprima **OK**.
3. Use las teclas **▲** y **▼** para ver los registros en la Lista de Llamadas.

La pantalla de registros de Lista de Llamadas muestra como ejemplo a un registro de Lista de Llamadas. La línea 1 muestra el número de veces que una persona habló seguido por la fecha y la hora del registro más reciente. La línea 2 muestra el servicio de Identificación de Llamada (Nombre, Desconocido o Privado). La línea 3 muestra el número de Identificación de Llamada seguido de los códigos para las llamadas que fueron Contestado (A) y Devolvió Llamada (C).

Nota: Si la cantidad de veces que se llama no es mayor de uno, el número de veces de llamadas no aparece. Llamadas repetidas se muestran hasta un máximo de 9. Si no se reciben la fecha y la hora de la red como parte de la llamada, estas no se mostrarán en la lista.

2.4GHz Multi-Handset Cordless Phone System

4. Para llamar un número desde la Lista de Llamadas, oprima **Talk** cuando el nombre y número esté en la pantalla.

Nota: Si se requiere el marcado de 10 dígitos en el código urbano local y solo aparecen 7 dígitos, el intento de llamada podría fallar. Por favor verifique los procedimientos de marcación de su área local. Vea la sección de "Configurar Códigos Urbanos" en el Capítulo 6 de este manual.

5. Para borrar un número de la Lista de Llamadas, oprima **DEL** cuando el nombre y número estén en la pantalla.
6. La pantalla de Fin Lista de Llamadas aparece cuando se está a final de la Lista de Llamadas.
7. Oprima **↶** o **OK** para devolver el teléfono al estado inactivo.
8. La pantalla de "No hay datos" aparece si usted no está suscrito al servicio de Identificación de Llamadas o no se recibió la información antes de contestar la llamada.

Menú de la Lista de Llamadas

1. Oprima **OK** cuando esté viendo un registro de la lista de llamadas para exhibir el menú de la Lista de Llamadas.
2. Si se escoge "Marcar número" y hay una línea disponible, el sistema llama al número. El código de "Llamada regresada" se exhibirá aún si la línea estaba ocupada.

Nota: Si se requiere el marcado de 10 dígitos en el código urbano local y solo aparecen 7 dígitos, el intento de llamada podría fallar. Por favor verifique los procedimientos de marcación de su área local. Vea la sección de "Configurar Códigos Urbanos" en el Capítulo 6 de este manual.

3. Si se escoge "Borrar Guía Tele.", se le preguntará si quiere borrar todos los registros. Oprima **OK** para borrar todo. Oprima **↶** o **Menú** para regresar a la pantalla anterior y no se borrarán los registros.
4. La pantalla de "Todos registros borrados" aparecerá si usted ha seleccionado **OK**.

Capítulo 5

Guía Telefónica

La función de la Guía Telefónica le permite almacenar hasta 120 de los números telefónicos más frecuentes en un formato de libreta telefónica. La cantidad de registros que se pueden almacenar depende de la longitud del nombre y del número. Una Guía Telefónica también se puede enviar de un auricular a otros sin remplazar los registros existentes en la Guía Telefónica del auricular receptor. Los registros de la Guía Telefónica se almacenan y exhiben en orden alfabético.

Crear o añadir registros en la Guía Telefónica

1. Oprima **DIRCTRY**.
2. Oprima **ADD** para crear un registro. Vea la caja de abajo para que le guíe en cómo anotar y editar texto.

Usando el teclado en el auricular, puede introducir letras y dígitos dependiendo de cuantas veces oprima la tecla. Por ejemplo, cuando introduce un nombre, la tecla "2" introduce la "a" cuando se oprime una vez, "b" cuando se oprime dos veces, "c" cuando se oprime tres veces y "2" cuando se oprime cuatro veces. Use la tecla "*" para hacer mayúsculas y la tecla "1" para introducir un espacio. Puede editar el registro usando las flechas  y , y la tecla  borra la letra inmediatamente a la izquierda del cursor.

*Nota: Para más opciones de anotación de texto, por favor refiérase capítulo 6 **Introduciendo Letras y Puntuación**.*

3. Anote el nombre (hasta 16 caracteres) y oprima la tecla  para moverse a la siguiente línea. Anote el número de teléfono y oprima **OK**. Seleccione "Save Entries" (Guardar Registro) y oprima **OK**. La pantalla mostrará "Entry Stored" (Registro memorizado).

2.4GHz Multi-Handset Cordless Phone System

Seleccionar un Registro

Una vez que haya introducido nombres y números en la Guía Telefónica, los puede marcar, corregir o enviar a otro auricular. Para trabajar con un registro individual, primero lo debe seleccionar.

1. Oprima **DIRCTRY**
2. Ya sea que se desplace al nombre que quiere seleccionar u oprima la tecla para ir al inicio de los registros con una letra en particular (por ejemplo, oprima la tecla 3 dos veces para ir a los registros que comienzan con la letra E).

Hacer una Llamada desde la Guía Telefónica

1. Para hacer una llamada desde la Guía Telefónica, oprima **DIRCTRY** y desplácese con las teclas **▲** y **▼** para seleccionar el número al que quisiera hablar. También podrá acceder los nombres dentro de la Guía Telefónica mediante la introducción de la primera letra de un registro (por ejemplo, oprimiendo "6" dos veces para obtener la "n" si quiere llamar a "Nancy")
2. Oprima **Talk** para conectar.

Corregir un Registro

Cada registro de la Guía Telefónica tiene dos campos que se pueden corregir: el nombre y el número.

1. Seleccione el registro que desea corregir (vea la sección de Seleccionar un Registro, arriba) y oprima **OK**.
2. Seleccione "Edit Entry". Oprima **OK**. El nombre empezará a parpadear indicando que lo puede cambiar.
3. Para escribir sobre el nombre entero, simplemente empiece a introducir el nuevo nombre.
4. Para corregir el número, oprima la tecla **>** hasta que el número empiece a parpadear.
5. Para escribir sobre el número entero, simplemente empiece a introducir el número.
6. Cuando termine de corregir oprima **OK**.
7. Oprima **OK** de nuevo para "Save Entry."

2.4GHz Multi-Handset Cordless Phone System

Borrar un Registro

Para borrar un registro individual de su Guía Telefónica, primero selecciónelo.

1. Seleccione el registro que desea borrar (vea la sección de Seleccionar un Registro, arriba) y oprima **OK**.
2. Seleccione "Borrar Registro" y oprima **OK**.
3. La pantalla mostrará "Entry Deleted".
4. Oprima End para salir de la Guía Telefónica.

Enviar un Registro

Los registros de la Guía Telefónica pueden copiarse de un auricular a otro. Para hacer esto primero seleccione el registro en el auricular que contiene el registro (por ejemplo, "Auricular 1").

1. Seleccione el registro que desea enviar (vea la sección de Seleccionar un Registro, arriba) y oprima **OK**.
2. Anote el número del auricular al que será enviado el registro de la Guía Telefónica (por ejemplo, "Interno 2") y oprima **OK**.
3. El auricular 2 comenzará a timbrar.
4. Oprima **Talk** en el auricular 2. "Transfiriéndose Datos" se mostrará en la pantalla. El auricular 1 mostrará el siguiente registro en el directorio después de que haya terminado la transferencia.

Borrar la Guía Telefónica

Si quiere borrar la Guía Telefónica en el auricular:

1. Oprima **Menu**.
2. Seleccione "Directory" y oprima **OK**.
3. Seleccione "Delete Directory" y oprima **Menu. OK**.
4. Cuando la pantalla muestra "¿Borrar todos los registros?" oprima **OK**.
5. La pantalla mostrará "All Entries Deleted".
6. Oprima **End**.

2.4GHz Multi-Handset Cordless Phone System

Enviar la Guía Telefónica

Usted puede transferir todos los registros únicos de un auricular al otro, para que no tenga que almacenarlos manualmente en cada auricular. Si el otro auricular no tiene suficiente espacio de almacenaje sonará un tono de error y el proceso de transferencia no se completa.

1. Oprima **Menu**.
2. Seleccione "Directory" y oprima **OK**.
3. Seleccione "Send Directory" y oprima **OK**.
4. Anote el número del auricular al que se deben enviar los registros de la Guía Telefónica y oprima **OK**.
5. Ese auricular comenzará a timbrar. Oprima **Talk** en el auricular timbrando.
6. Cuando termine la transferencia, oprima **END** en el primer auricular.

Memoria Disponible

Usted puede verificar la cantidad memoria tiene disponible para su Guía Telefónica.

1. Oprima **Menu**.
2. Seleccione "Directory" y oprima **OK**.
3. La pantalla mostrará qué porcentaje de la memoria de la Guía Telefónica no está en uso.
4. Oprima **End (FIN)**.

Capítulo 6

Personalizando Su Sistema

Asignando un Nombre al Auricular

Usted puede personalizar auricular y la base con nombres que usted escoge. Esta función le permite asociar un nombre con un auricular en particular y opera como Identificación de Llamadas para llamadas internas (de intercomunicación).

1. Oprima la tecla de **Menu**.
2. Seleccione "System Settings" y oprima **OK**.
3. Seleccione "Assign Name".
4. Seleccione los teléfonos inalámbricos (o la unidad base) que quiere nombrar. La pantalla exhibirá un nombre genérico para el auricular como "Interno 1".
5. Introduzca el nuevo nombre usando el teclado del auricular y oprimiendo **OK**.
6. Oprima **OK** de nuevo para guardar el nuevo nombre y oprima **End** cuando termine.

<i>Nota: Los nombres no pueden contener más de 16 caracteres.</i>

Introducir Letras y Puntuación

Usted puede usar las teclas numéricas para introducir texto alfanumérico. La Guía Telefónica y los nombres asignados del auricular son ejemplos de texto alfanumérico. Los números de teléfono y los códigos urbanos son ejemplos de entradas numéricas.

2.4GHz Multi-Handset Cordless Phone System

La tabla de abajo indica cuál tecla está asociada con el símbolo, la letra o el número correspondiente. Por ejemplo, dependiendo de la cantidad de veces que se oprime la tecla "2" esta anotará "a", "b", "c", "á", o "2".

Tecla	1°	2°	3°	4°	5°	6°	7°	8°
1	Espacio	&	@	'	,	.	-	1
2	a	b	c	2	á			
3	d	e	f	3	é			
4	g	h	i	4	í			
5	J	k	l	5				
6	m	n	o	6	ñ	ó		
7	p	q	r	s	7			
8	T	u	v	8	ú			
9	w	x	y	z	9			
0	0							
*	Mayus	*						
#	#							

Para cambiar a mayúsculas, oprima la tecla * una vez y después oprima la tecla apropiada para exhibir la mayúscula deseada de la letra del alfabeto. La tecla * no crea una condición de "mayúsculas". Debe oprimir la tecla * para cambiar a mayúsculas para cada letra. Para insertar un espacio (por ejemplo, entre el nombre de pila y el apellido), oprima la tecla 1 una vez. Para insertar uno de los símbolos de puntuación, oprima "1" hasta que aparezca el símbolo que desea.

Si pasa la letra o el símbolo que quiere, continúe oprimiendo la tecla y pasando a través de la lista. Cuando se exhiba la última letra o símbolo, oprima la tecla otra vez y comience la lista de nuevo.

2.4GHz Multi-Handset Cordless Phone System

Configurar Códigos Urbanos

Usted puede configurar el sistema (bajo **Config. Sistema, Códigos Urbanos**) para usar el código urbano local (utilizado para marcar los números de siete dígitos) y hasta tres códigos urbanos adicionales que no requieren del "1". Estos códigos urbanos adicionales se usan para marcar números telefónicos de diez dígitos en ciudades grandes donde las llamadas locales usan múltiples códigos urbanos.

- Si el código urbano en la Identificación de Llamada es igual que el código urbano local, la llamada se marca como "local" y el registro contendrá solo el número de 7 dígitos.
- Si el código urbano en la Identificación de Llamadas es igual que los códigos urbanos locales "adicionales", la llamada se marca como "extra". El sistema deja el código urbano intacto cuando está almacenando el número en el directorio o marca el número desde la Lista de Llamadas. El registro contendrá y marcará todos los 10 dígitos del número (el código urbano + el número).
- Si el código urbano en el servicio de Identificación de Llamada no es igual que el código urbano local o los códigos urbanos "extras", no se marca como "local" o "extra". El sistema deja el número entero intacto y añade un "1" al frente del número cuando lo almacena en la Guía Telefónica. Cuando almacena en la Guía Telefónica o marca desde la Lista de Llamadas, el registro contendrá "1 + Código Urbano + Número".

Configurar código urbano para marcado de 7 dígitos

Si usted marca llamadas locales usando siete dígitos (por ejemplo: 555-1212), siga estos pasos para configurar su teléfono para que automáticamente marque los números desde su Lista de Llamadas:

1. Oprima la tecla de **Menu**.
2. Seleccione "System Settings" y oprima **OK**.
3. Seleccione "Area Codes" y oprima **OK**.
4. Seleccione "Local Code:" y oprima **OK**.
5. Introduzca su código urbano local y oprima **OK**.

2.4GHz Multi-Handset Cordless Phone System

6. Seleccione "Save Entry" y oprima **OK**.
7. Si hay otros códigos urbanos que usted marca 10 dígitos (y no requiere de marcar el "1" antes), introduzca estos códigos urbanos como "Extra Codes".

Configurar código urbano para marcado de 10 dígitos

Si usted marca llamadas locales usando diez dígitos (por ejemplo: 303-555-1212), siga estos pasos para configurar su teléfono para que automáticamente marque los números desde su Lista de Llamadas:

1. Oprima la tecla de **Menu**.
2. Seleccione "System Settings" y oprima **OK**.
3. Seleccione "Area Codes" y oprima **OK**.
4. Seleccione "Extra Code:" y oprima **OK**. Nota: "Local Code" debe permanecer en blanco.
5. Introduzca su código urbano y oprima **OK**.
6. Seleccione "Save Entry" y oprima **OK**.
7. Si hay otros códigos urbanos que usted marca 10 dígitos (y no requiere de marcar el "1" antes), introduzca estos códigos urbanos como "Extra Codes".

Timbre

Puede seleccionar el volumen del timbre de los teléfonos inalámbricos individuales.

Volumen del Timbre

1. Oprima **Menu**.
2. Seleccione "Handset Settings" y oprima **OK**.
3. Seleccione "Ringer Settings" y oprima **OK**.
4. Seleccione ya sea "External Ringer" o "Intercom Ringer" y oprima **OK**.

<i>Nota: Ambos se pueden ajustar, pero solo se pueden ajustar uno a la vez.</i>

5. Seleccione el "Ringer Pitch" (Vol. del Timbre) y oprima **OK**. El auricular comenzará a timbrar.

2.4GHz Multi-Handset Cordless Phone System

6. Use las teclas  y  para ajustar el volumen. Hay siete posiciones incluyendo silencio. El nivel 6 de volumen representa el más alto mientras el volumen en nivel 0 representa silencio (el icono de la campana con una x atravesada).
7. Oprima **OK** cuando el volumen del timbre esté en el nivel deseado. Suena un sonido de aviso y el auricular regresa al menú anterior.

Nota: Oprima **End** antes del paso 7 para salir sin guardar los cambios.

Tono del Timbre

También puede cambiar el tono de los auriculares individuales.

1. Oprima **Menu**.
2. Seleccione "Handset Settings" y oprima **OK**.
3. Seleccione "Ajuste Timbre" y oprima **OK**.
4. Seleccione ya sea "External Ringer" (Timbrando Ext.) o "Intercom Ringer" (Timbrando Int.) y oprima **OK**.

Nota: Ambos se pueden ajustar pero solo se pueden ajustar uno a la vez.

5. Seleccione "Ringer Pitch" (Melodía de Timb) y oprima **OK**. El auricular empezará a sonar.
6. Use las teclas  y  para cambiar el tono hacia arriba o abajo. Hay dieciséis posiciones.
7. Oprima **OK** cuando esté en el tono deseado. Suena una señal de aviso y el auricular regresa al menú anterior.

Nota: Oprima **End** para salir sin guardar los cambios.

Configuración de Fábrica

Seleccione "Factory Defaults" (Config. de Fábrica) para restablecer la configuración de fábrica el auricular.

Capítulo 7



Auriculares de teléfonos Adicionales y Cargadores

Usted puede, a su opción, adquirir de Qwest auriculares de teléfonos adicionales y cargadores para su sistema. Se puede usar hasta un total de cuatro auriculares inalámbricos con su estación de base. Los cuatro teléfonos inalámbricos incluyen el teléfono inalámbrico que viene con la base y hasta tres teléfonos inalámbricos adicionales. El teléfono inalámbrico que viene con la base ya está dada de alta para funcionar con la base. Debe dar de alta los demás teléfonos inalámbricos para que también funcionen con su base. Solamente los teléfonos inalámbricos adquiridos de Qwest funcionarán con su sistema.

Dar de alta a los Auriculares de teléfonos Adicionales

Para dar de alta auriculares adicionales que se compraron.

1. Prenda el auricular oprimiendo el botón **Pwr**.
2. La pantalla del auricular exhibirá "Dar de Alta"
3. Oprima **OK** para iniciar la modalidad de dar de alta.
4. La pantalla del exhibirá "Buscando".
5. Durante los 3 minutos de haber oprimido **OK**, sostenga la tecla "**Flash**" en la base hasta que la luz de "**In Use**" en el teléfono con altavoz empiece a parpadear.
6. Cuando la base y el auricular se conectan, el auricular le permitirá seleccionar un número de intercomunicación asociado con ese auricular. Las selecciones válidas son del 1 al 4. Solo aparecen los números que no están en uso.
7. Cuando se ha hecho la selección, la pantalla exhibirá: "Tel.Portátil X Dado de Alta".

2.4GHz Multi-Handset Cordless Phone System

Cargador para los Teléfonos Inalámbricos Adicionales

La cuna del cargador puede instalarse sobre una superficie plana o montarse en la pared. Debe estar conectada al enchufe de corriente AC.

Hay dos iconos de carga de batería en la esquina inferior izquierda de la cuna del cargador. La luz debajo del icono de la derecha indica si las pilas del auricular se están cargando. Debería estar en ON cuando se está cargando. La "R" en el icono izquierdo de la cuna del cargador representa "Reserva". La luz debajo de este icono indica si las pilas en el compartimento para pilas de repuesto de la cuna del cargador están cargando.

<i>Nota: La luz del icono de carga de pila puede apagarse periódicamente durante la carga. Esto es normal.</i>
--

Compartimento para Carga de Repuesto

Hay un compartimento separado para cargar pilas en la parte trasera de la cuna del cargador. Usted podría adquirir dos baterías AA recargables de Ni-MH y almacenarlas en el compartimento de reserva del cargador.

NO coloque pilas que no sean recargables en el compartimento de reserva. Cuando reemplace las baterías del auricular con las pilas de repuesto, reemplace ambas pilas.

Audífonos Opcionales

Se puede adquirir por separado un audífono con un enchufe de 2.5 mm y usarse con el teléfono inalámbrico. Conecte el audífono en el enchufe que se ubica a un costado del teléfono inalámbrico.

2.4GHz Multi-Handset Cordless Phone System

Instrucciones importantes de seguridad e información del producto

PRECAUCIÓN

Para reducir el riesgo de incendios, corto circuitos y/o lesiones, siga estas precauciones básicas de seguridad cuando use su equipo telefónico.

1. Lea y comprenda todas las instrucciones.
2. Siga todas las advertencias e instrucciones, incluyendo aquellas marcadas en el producto.
3. Desconecte este producto del enchufe telefónico de pared y de la corriente antes de limpiarlo. No use limpiadores líquidos o de aerosol. Utilice un paño húmedo para limpiarlo.
4. No use la estación de base cerca de agua, por ejemplo, cerca de una tina de baño, un lavadero, un lavado, una tina de lavandería, en un sótano mojado o cerca de una alberca.
5. No coloque este producto sobre una mesa, base o carro inestable. El producto puede caerse, causando daños serios al producto.
6. Hay aperturas en el gabinete y en la parte trasera e inferior para que se ventile y no se caliente demasiado. Estas aperturas no se deben bloquear o cubrir. Estas aperturas nunca deben bloquearse colocando el producto sobre una cama u otra superficie similar. Este producto nunca debe colocarse cerca o encima de un radiador o salida de calor. Este producto no debe colocarse dentro de una instalación cerrada a menos de que exista ventilación adecuada.
7. Este producto solo debe operarse con el tipo de corriente indicada en la etiqueta. Si no está seguro del tipo de corriente que tiene en su casa, consulte a Qwest o a su compañía local de luz.
8. No sobre cargue los contactos de pared ni los cables de extensión pues esto podría presentar un riesgo de incendio o corto circuito.
9. Nunca introduzca ningún tipo de objeto en el producto a través de las ranuras del gabinete pues podría tocar puntos de voltajes peligrosos o hacer un corto circuito en alguna parte que pudiera provocar un riesgo de incendio, corto circuito o lesión. Nunca derrame líquido de ningún tipo sobre este producto.
10. Para reducir el riesgo de un corto circuito o quemaduras, no desarme este producto. Llévelo con el personal de servicio calificado cuando se requiera algún servicio o compostura. El abrir o remover las tapas podría exponerlo a niveles peligrosos de voltaje, de corriente eléctrica u otros riesgos. El rearmado incorrecto podría provocar choques eléctricos cuando se vuelva a usar el aparato.
11. Desconecte la base de control del enchufe de pared y llévelo al personal de servicio calificado cuando se presente cualquiera de las siguientes condiciones:
 - a. Si se ha derramado líquido sobre el producto.
 - b. Si el producto ha sido expuesto a lluvia o agua.
 - c. Si el producto no opera normalmente al seguir las instrucciones de operación de este manual, sólo ajuste los controles que se explican en las instrucciones de operación puesto que la modificación inadecuada de otros controles podría dañarlo y en muchas ocasiones el restaurar el producto a su operación normal podría requerir de trabajo extenso por parte del personal de servicio calificado.

2.4GHz Multi-Handset Cordless Phone System

- d. Si el producto se ha caído o se ha dañado el gabinete.
- e. Si el producto muestra un cambio marcado en su desempeño.
- 12. Evite el uso del teléfono durante una tormenta eléctrica. Podría existir el riesgo de un choque eléctrico provocado por un relámpago.
- 13. No use el teléfono para reportar una fuga de gas si se encuentra cerca de la fuga.
- 14. No se retrae la antena en la base de control. Para prevenir lesiones, no coloque el teléfono en sitios donde una persona pudiera pisar, tropezarse o caerse sobre el teléfono.
- 15. No coloque objetos de metal en la antena.
- 16. No meta objetos foráneos a cualquiera de los hoyos en la estación de escritorio o en el auricular. Podría dañar las bocinas, los auriculares, los micrófonos o a su persona.
- 17. Nunca instale los contactos de pared en un sitio mojado a menos de que el enchufe esté diseñado específicamente para sitios mojados.
- 18. Nunca toque cables o terminales de teléfono que no estén aislados a menos de que la línea del teléfono haya sido desconectada de la red.

Precauciones para las pilas: Para reducir el riesgo de incendio, lesiones, choques eléctrico o daños a la propiedad, y para desechar adecuadamente las pilas, por favor lea y entienda las siguientes instrucciones.¹ Solamente use pilas recargables tipo AA de níquel hidruro (NiMH) en el auricular y en el compartimento de la pila de reserva.

NO utilice ningún otro tipo de pila recargable ni pilas no recargables. Las pilas podrían hacer corto circuito y la capa de la pila podría dañarse y presentar una condición peligrosa. Las etiquetas de instrucciones se localizan en el auricular y en el compartimento de la unidad de carga de las pilas.

- 2. No coloque las pilas en contacto que agua o fuego.
- 3. Siempre siga las precauciones básicas de seguridad cuando use y deseche las pilas. No deseche las pilas en el fuego pues las pilas podrían explotar. Revise los códigos locales para instrucciones especiales acerca de su desecho.
- 4. NO UTILICE PILAS ALCALINAS, PILAS DE NIQUEL CADMIO O DE LITIO EN EL CARGADOR DE PILAS DEL AURICULAR O EN EL COMPARTIMENTO DE LA PILA DE RESERVA.
- 5. Periódicamente limpie los contactos de carga tanto en el cargador como en el auricular.
- 6. NO mezcle pilas nuevas con pilas viejas en este producto.
- 7. Coloque el contacto positivo (+) de la pila conforme lo indica el diagrama en el auricular y en el compartimento de la pila de reserva.
- 8. Tenga cuidado con el manejo de las pilas para que no hagan corto con materiales conductores, tales como lo son anillos, brazaletes y llaves. Las pilas o el material conductor pueden sobre calentarse y provocar quemaduras o incendios.
- 9. No abra ni mutile las pilas. El electrolito es corrosivo y puede causar lesiones a los ojos o la piel. El electrolito puede ser tóxico si se ingiere.
- 10. Las pilas se calientan durante la **carga**. Esto es normal y no es peligroso.

2.4GHz Multi-Handset Cordless Phone System

Garantía Limitada

El fabricante garantiza, solo al comprador original, el material y la fabricación de este producto por UN AÑO de la fecha de compra. El fabricante reparará o reemplazará, a nuestra discreción, este producto sin cargo si fuera a tener una falla provocada por un defecto en los materiales o la fabricación dentro de ese mismo periodo. Las pilas AA de níquel-hidruro se garantizan de estar libres de defectos al momento de la compra.

Esta garantía no aplica a pérdidas o daños que pudieran resultar de un accidente, mal uso o negligencia. Todas las demás garantías, expresas, implícitas o estatutarias, incluyendo las garantías de aptitud para algún propósito específico, están limitadas al periodo enumerado y de otra manera se excluyen de esta garantía. el fabricante podrá, a su discreción, cancelar la garantía si se haya intentado reparaciones no autorizadas. Además, el fabricante no será responsable por cualesquiera daños incidentales o perjuicios indirectos o pérdida comercial, ni por ninguna pérdida o daño.

El fabricante no asume responsabilidad alguna por productos que se enviaron sin antes contar con la **Autorización de Devolución**.

Para ordenar servicio, dentro o fuera de la garantía, por favor hable al **Servicio al Cliente** del fabricante al 1-888-777-0211. Para servicio de garantía se requiere comprobación de la compra.

2.4GHz Multi-Handset Cordless Phone System

ÍNDICE

Acceso a la Guía Telefónica, 59	Intercomunicación, 46
Altavoz, 44, 45	Intromisión de Llamada, 50
Audífono, 69	Línea en uso, 54
Audífonos, 67	Lista de Llamadas, 55
Auriculares de Teléfonos Adicionales, 66	Llamada de Consulta, 50
Borrar la Guía Telefónica, 59	Llamada des Tres en Línea (Conferencia), 51
Borrar un Registro, 59	Llamada desconocida, 52
Buscando, 67	Llamada en Espera, 55
Campanilla	Llamadas Externas, 44
Campanilla del Intercomunicador	Llamadas internas, 45
Campanilla Externa	Luz de fondo, 48
Cancelar Llamada en Espera, 58	Marcación Previa, 51
Cancelar Registro,	Marcado Continua Repetida, 48
Cargador para los Teléfonos Inalámbricos, 67	Marcado Repetida, 48
Códigos Urbanos, 21	Memoria, 60
Compartimento para Carga de Repuesto, 67	Menu, 61
Configuración de Fabrica, 65	Micrófono, 70
Contenido de la caja del Sistema, 40	Monitoreo de habitación, 52
Corregir un Registro, 58	Mute, 11
Crear o Añadir, 59	Pagar-Par-Uso, 52
Devolver Llamada Automáticamente, 58	Pantalla LCD, 68
Enviar la Guía Telefónica, 60	Pilas, 43
Enviar un Registro, 59	Pinza de cinturón, 50
Fin, 61	Precauciones de seguridad para las pilas, 68
Flash, 67	PWR, 33, 67
Fuente de poder, 42	Remarcado, 46
Fuera de rango, 48	Retención, 46
Garantía Limitada, 70	Seleccione un Registro, 58
Guía Telefónica, 57	Servicio, 50
Hasta un Llamada	Talk, 11
Identificación de Llamadas en Llamada en Espera, 26	Tapa del cargador de pilas, 49
Identificación de Llamadas, 54	Teclado suave
Idioma, 44	Terminación de llamadas,
Indicador de mensaje en Espera, 49	Tiempo de llamada, 48
Indicador de pila baja, 48	Tono del timbre, 65
Instalación de la base, 41	Tono temporal, 53
Instalación de su teléfono inalámbrico, 54	Transferencia, 49
Instalar el sujetador al Cinturón, 42	Un Nombre al Auricular, 63
Instrucciones de Español, 42	Volumen del timbre, 64
Instrucciones de seguridad, 68	Volumen del auricular, 66

2.4GHz Multi-Handset Cordless Phone System

If you want to learn more about the multi-handset cordless phone system or accessories, please visit our Web site at <http://www.qwest.com>.

Information subject to change as Qwest 2001 reserves the right, without notice, to make changes in equipment design or components as progress in engineering or manufacturing methods warrant.

© Qwest 2001 All rights reserved.

A30883-N2430-A11-2